


Bluetooth® Audio System

Installation/Connections
Installation/Anschluss
Installation/Connexions
Instalazione/Collegamenti
Montage/Aansluitingen


Max. supply current 0.3 A
max. Versorgungsstrom 0,3 A
Courant d'alimentation maximum 0,3 A
Alimentazione massima fornita 0,3 A
Max. voedingsstroom 0,3 A



MEX-BT4000U

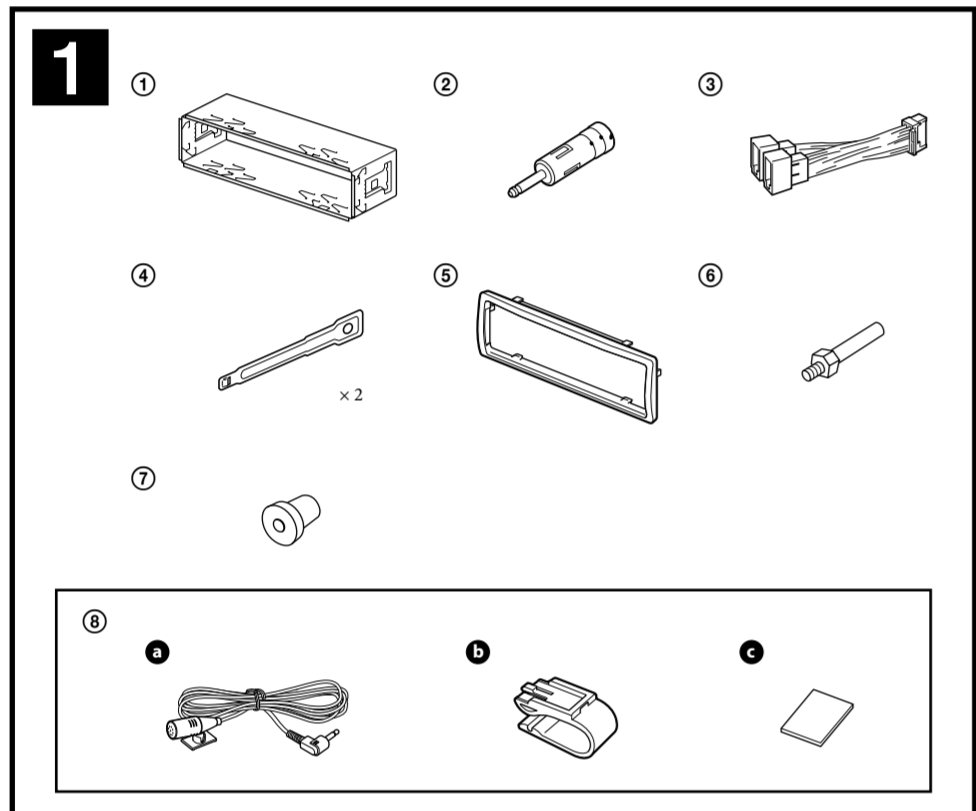


Equipment used in illustrations (not supplied)
In Abbildungen dargestellte Geräte (nicht mitgeliefert)
Appareils utilisés dans les illustrations (non fournis)
Apparecchiatura utilizzata nelle illustrazioni (non in dotazione)
Apparatuur gebruikt in de afbeeldingen (niet bijgeleverd)

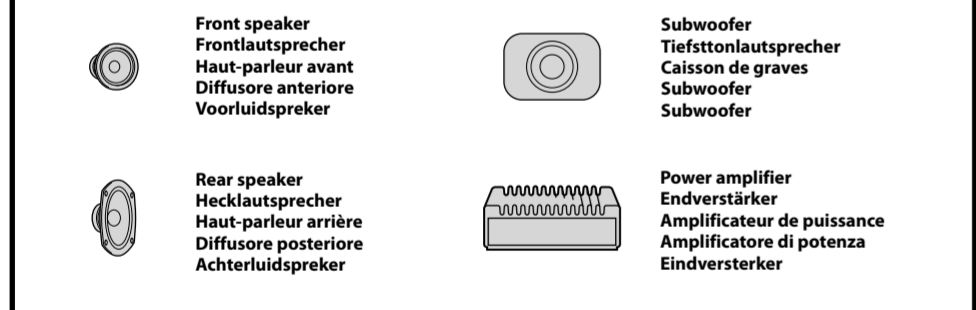


Warning
If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

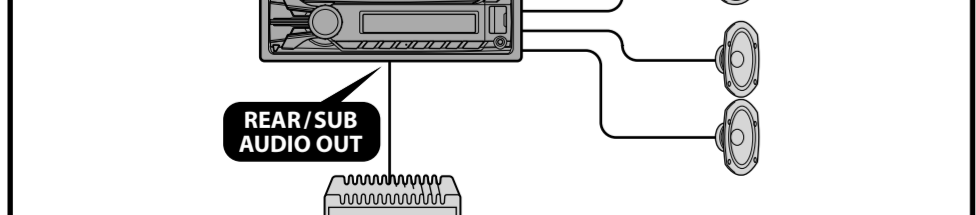

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

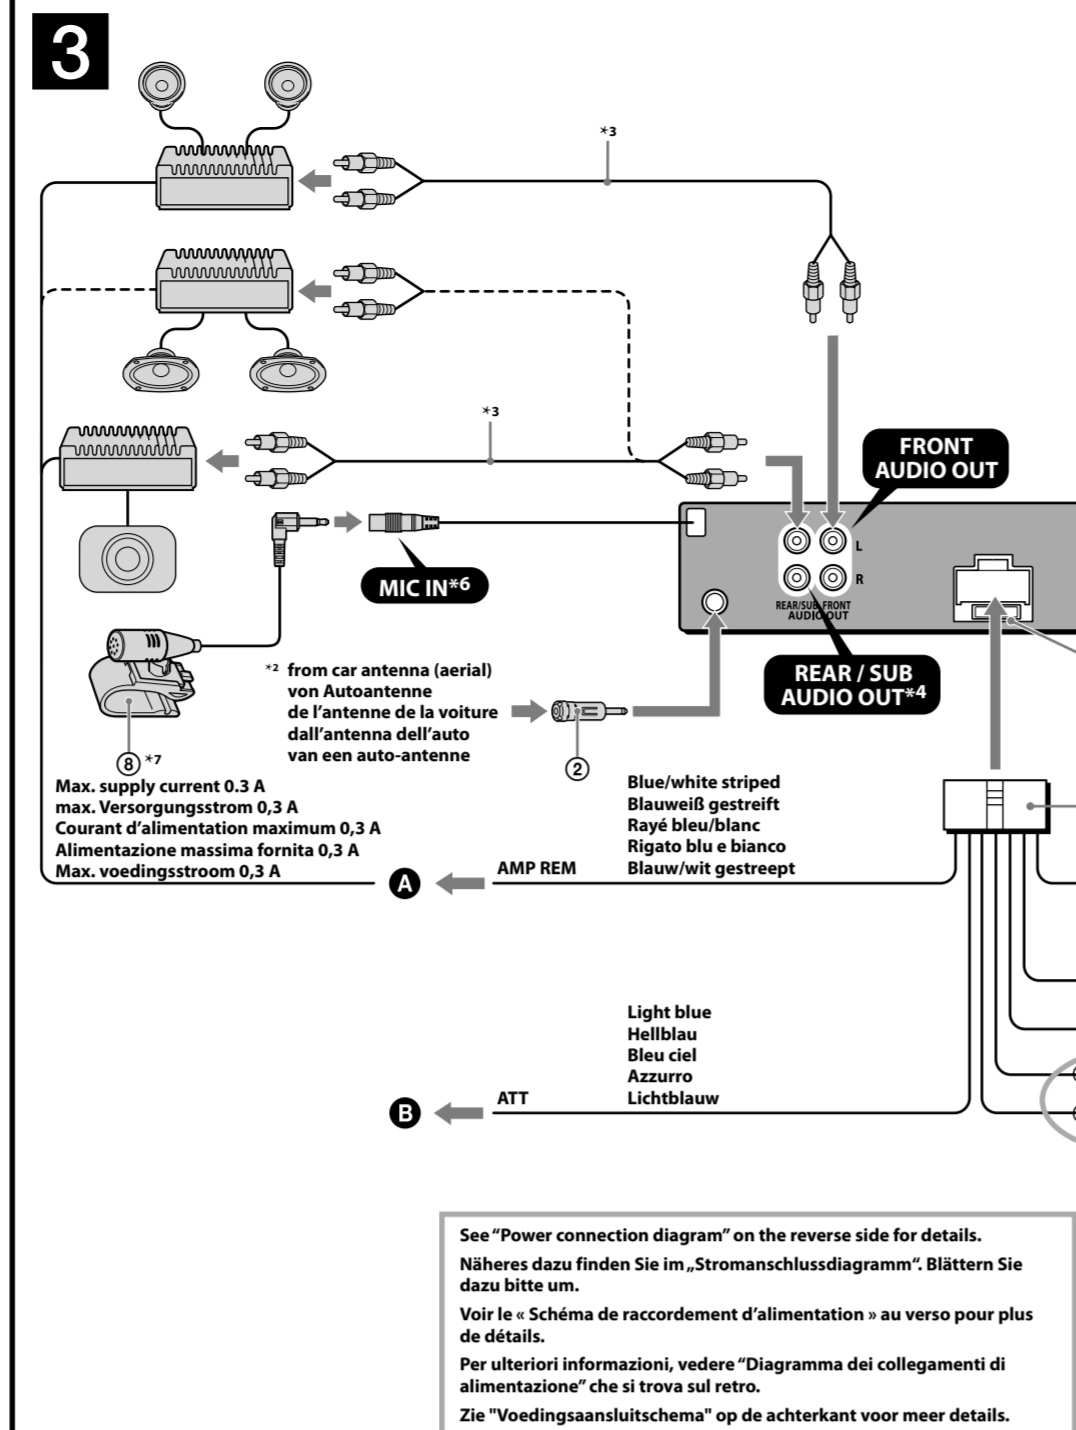

See "Power connection diagram" on the reverse side for details.
Näheres dazu finden Sie im „Stromanschlussdiagramm“. Blättern Sie dazu bitte um.
Voir le « Schéma de raccordement d'alimentation » au verso pour plus de détails.
Per ulteriori informazioni, vedere "Diagramma dei collegamenti di alimentazione" che si trova sul retro.
Zie "Voedingsaansluitschema" op de achterkant voor meer details.

Cautions

- Be sure to install this unit in the dashboard of the car as the rear side of the unit becomes hot during use.
This unit is designed for negative ground (earth) 12 V DC operation only.
Do not get the leads under a screw, or caught in moving parts (e.g. seat railing).

Parts list

- The numbers in the list are keyed to those in the instructions.
The bracket (1) and the protection collar (2) are attached to the unit before shipping. Before mounting the unit, use the release keys (3) to remove the bracket (1) from the unit. For details, see "Removing the protection collar and the bracket (1)" on the reverse side of the sheet.

Warnhinweise

- Installieren Sie das Gerät unbedingt im Armaturenbrett des Fahrzeuges. Denn die Rückseite des Geräts erwärmt sich bei Betrieb.
Dieses Gerät ist ausschließlich für den Betrieb bei 12 V Gleichstrom (negative Erdung) bestimmt.

Teilleiste

- Die Nummern in der Liste sind dieselben wie im Handbuchs.
Die Klammer (1) und die Schutzumrandung (2) werden vor dem Ausliefern am Gerät angebracht. Bevor Sie das Gerät montieren, nehmen Sie die Halterung (1) mithilfe der Löseschlüssel (3) bitte vom Gerät ab.

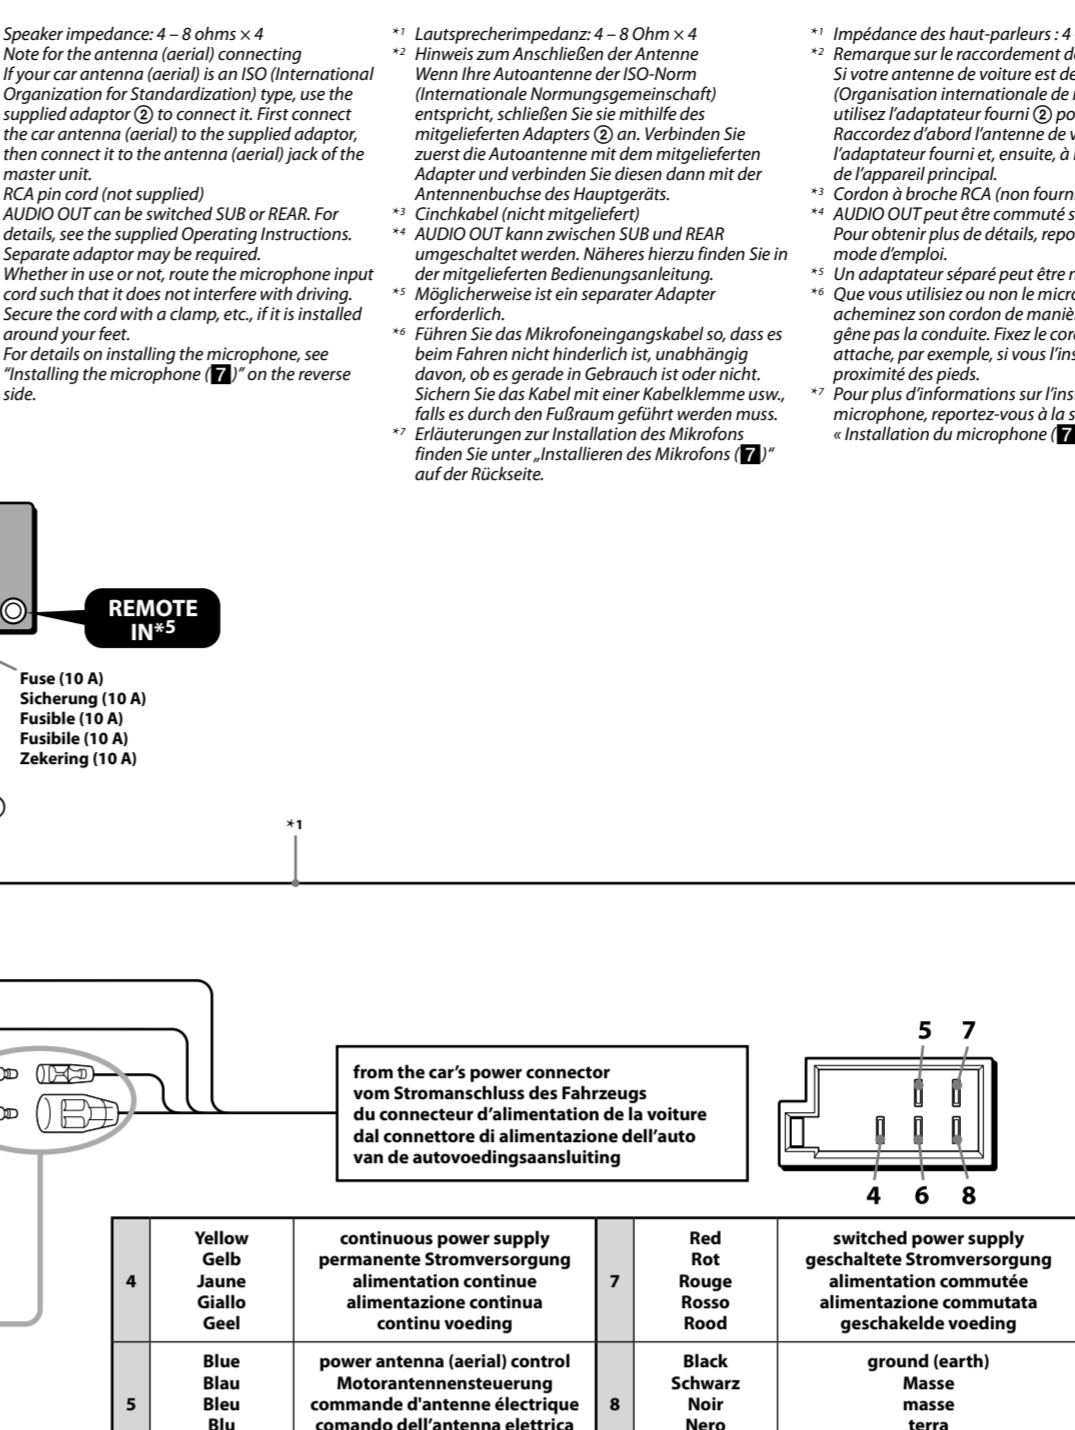


Table with 4 columns: Color, Power supply type, Color, and Ground type. Includes translations for Yellow/Gelb, Red/Rouge, Orange/White, and others.

Précautions

- Installez cet appareil sur le tableau de bord de la voiture, car l'arrière de l'appareil chauffe en cours d'utilisation.
Cet appareil est conçu pour fonctionner uniquement sur un courant continu de 12 V avec masse négative.

Liste des composants

- Les numéros de la liste correspondent à ceux des instructions.
Le support (1) et le tour de protection (2) sont fixés à l'appareil en usine. Avant le montage de l'appareil, utilisez les clés de déblocage (3) pour détacher le support (1) de l'appareil.

Attenzione

- Assicuratevi di installare l'apparecchio nel cruscotto dell'auto, poiché la parte posteriore dell'apparecchio stesso si surriscalda durante l'uso.
Questo apparecchio è stato progettato per l'uso solo a 12 V CC con massa negativa.

Elenco dei componenti

- I numeri nella lista corrispondono a quelli riportati nelle istruzioni.
La staffa (1) e la cornice protettiva (2) vengono applicati all'unità in fabbrica. Prima di installare l'unità, utilizzare le chiavette di rilascio (3) per rimuovere la staffa (1) dall'apparecchio.

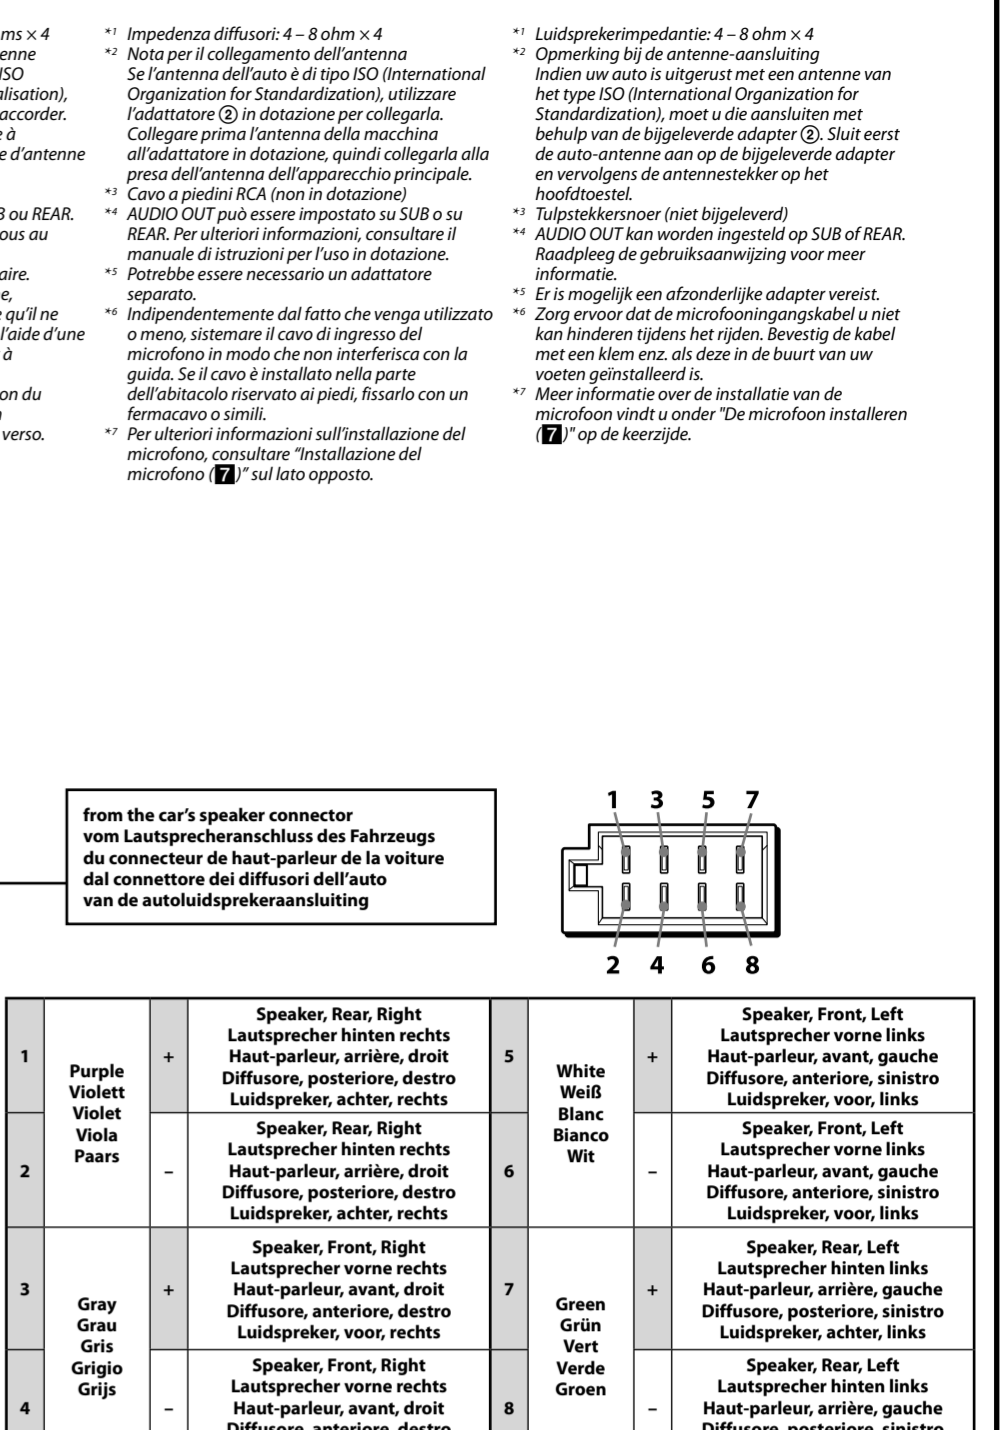


Table with 4 columns: Color, Speaker configuration, Color, and Speaker configuration. Includes translations for Purple/Violet, White/Blanc, Gray/Gris, and Green/Vert.

Let op

- Installeer dit apparaat in het dashboard van de auto omdat de achterkant van het apparaat tijdens gebruik heet kan worden.
Dit apparaat is ontworpen voor gebruik op een auto-accu van 12 V gelijkstroom, negatieve aarde.

Onderdelenlijst

- De nummers in de afbeelding verwijzen naar die op de montage-aanwijzingen.
De beugel (1) en de beschermende rand (2) worden bevestigd op het apparaat voordat dit wordt verzonden.

Connection example

Connection diagram

Warning

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Warnhinweise

Anschlussbeispiel

Warnung

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Précautions

Exemple de raccordement

Attention

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Attenzione

Esempio di collegamento

Avvertenza

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Let op

Voorbeeldaansluitingen

Opmerking

If you have a power antenna (aerial) without a relay box, connecting this unit with the supplied power supply lead (3) may damage the antenna (aerial).

Notes on the control and power supply leads
The power antenna (aerial) control lead (blue) supplies +12 V DC when you turn on the tuner or when you activate the AF (Alternative Frequency) or TA (Traffic Announcement) function.

Notes on speaker connection
Before connecting the speakers, turn the unit off.
Use speakers with an impedance of 4 ohms or more, and with adequate power handling capacities to avoid its damage.

Note on connection
If speaker and amplifier are not connected correctly, "FALLURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

